NACHİ

NON-LEAK TYPE SOLENOID VALVE

SNH Series Non-Leak Type Solenoid Valve

5.2 to 26.4 gpm 5075 psi



Features

Virtually no internal leakage

A poppet structure minimizes internal leaks from low pressures to as high as 5075 psi. Enhanced hydraulic circuit efficiency reduces energy needs.

Virtually no pressure loss at high volumes An original fluid reaction force suppression mechanism is provided for all sizes. Though compact, this valve provides the highest level switching capacity for its

High reliability

Since a wet type solenoid valve is used, the movable iron core remains immersed in oil as it moves, which minimizes switching noise and ensures reliable operation. A wet type valve also provides superior water resistance and longer life than a dry type valve.

ISO standard mounting service (01, 03 sizes)

This valve can be ganged together with a modular valve, enabling simple configuration of circuits and an overall compact device configuration.

EC connector for improved switching (06 size)

During switching, twice the current (starting current) flows to the coil than normal (holding current), which ensures reliable switching operations. The 06 size has compact configuration made possible by an original design that uses a small coil that provides high output, without the need for a large coil.

Specifications

		Mode	l No.	SNH-G01 (D03)	SNH-G03 (D05)	SNH-G04 (D07)	SNH-G06 (D08)		
	AR				b B M				
JIS	JIS Symbol HQ			A a					
			A2K						
Ma	Maximum Working Pressure								
	(P	ps , A, B	i Ports)	5075					
Rated	d Flow Ra	ate - Ma gpn	aximum Flow Rate	AR,HQ; 2.6-5.2 A2K; 1.3-5.2	5.2 - 10.5 10.5 - 15.8 15.8 - 26.4				
Maximi	um Chang	geover Fr	requency (per minute)		120				
ment	Wa		Resistance/ sistance Rank	JIS C 0920 IP65 (Dust-tight, Waterjet-proof) (Note 2) IP64 (Dust-tight, Spiash-proof)					
ıviron	An	nbient	Temperature		-4 to 1	L22° F			
ing Er	luid	Tem	perature Range		-4 to 1	L58° F			
perat	Water Resistance Rank Ambient Temperature Temperature Range Viscosity Range Filtration		scosity Range		15 to 30	00 centistokes			
0	Filtration				10 micror	ns or less			
١	Weight AR/HQ (A2K) lbs		3.9	11.4	12.1	15.2			
polt	Size x Length		M5 × 45 (Four)	M8 × 70 (Four)	M8 × 70 (Four)	M10 × 75 (Four)			
Mounting bolt	٦	_	ning Torque t lbs	4.4 to 5.9	22 to 25	22 to 25	40 to 44		

- Note: 1.Internal leaking does not exceed 1 droplet/minute (.003 cu in)
 - 2. The power supply type for E^* is IP64 (dust-tight, splash-proof).
 - 3. For mounting bolts, use grade 8 or equivalent.
 - $4. \\ \\ \text{Mounting bolts are not included with the 01 size. Bolts are included with the 03, 04, 06 sizes.}$

Handling

- 1 Take care so the B port is not subjected to abnormal surge pressure that is in excess of the maximum operating pressure.
- 2 The manual switching (Options M, N) push pin receives B port pressure, so it cannot be pressed with a pressure in excess of about 725 psi. In the case of the HQ and A2K types, note that leaks are not completely stopped, even in the locked state.
- 3 Use this valve only within the allowable voltage range.
- 4 Use of water- or glycol-based hydraulic operating fluid is standard. Contact your agent about using other fire-resistant hydraulic fluid.
- 5 Always keep the operating fluid clean. Allowable contamination is class NAS12 or less.
- 6 In order to realize the full benefits of the wet type solenoid valve, configure piping so oil is constantly supplied to the B port.
- 7 The coil surface temperature increases if this valve is kept continuously energized. Install the valve so there is no chance of it being touched directly by hand.
- 8 Never try to take this valve apart. The cap seal cannot be reassembled without using special tools.


• Solenoid Assembly Specifications

Solenoid	Solenoid Power Supply Voltage (Frequency	For SNH-G01				For SNH-G03			
Туре	Туре	Voltage (V)	(Hz)	Solenoid Coil Type	Current (A)	Power (W)	Allowable Voltage Range (V)	Solenoid Coil Type	Current (A)	Power (W)	Allowable Voltage Range (V)
	E1	AC100	50/60	EAC64-E1-1A	0.31	27	90 to 110	EBB64-E1	0.40	34	90 to 110
	E115	AC110	-	EAC64-E115-1A	0.26	25	100 to 125	EBB64-E115	0.33	31	100 to 125
DC with Built-in	AC115	AC115	50/60	EAC04-E113-1A	0.27	27	100 to 125	EBB04-EII3	0.34	34	100 to 125
Rectifier	E2	AC200	50/60	EAC64-E2-1A	0.15	26	180 to 220	EBB64-E2	0.22	37	180 to 220
	E230	AC220	50/60	EAC64-E230-1A	0.12	24	200 to 250	EBB64-E230	0.16	30	200 to 250
	E230	AC230	50/60	EAU04-E23U-IA	0.13	27	200 (0 250	EBB04-E230	0.17	33	200 to 250
DC	D1	DC12	×	EAC64-D1-1A	2.2	26	10.8 to 13.2	EBB64-D1	2.6	31	10.8 to 13.2
DC -	D2	DC24	×	EAC64-D2-1A	1.1	26	21.6 to 26.4	EBB64-D2	1.5	36	21.6 to 26.4

Solenoid	Power	Voltage (V)	Frequency		For SNH-G04			
Туре	Supply Type	voitage (v)	(Hz)	Solenoid Coil Type	Current (A)	Power (W)	Allowable Voltage Range (V)	
DC with	E1	AC100	50/60	EBB64-E1	0.40	34	90 to 110	
Rectifier	E2	AC200	50/60	EBB64-E2	0.22	37	180 to 220	
DC	D2	DC24	×	EBB64-D2	1.5	36	21.6 to 26.4	

Solenoid	Power Supply	Voltage (V)	Frequency		For SNH-G06				
Туре	Туре	voitage (v)	(Hz)	Solenoid Coil Type	Drive Current (A)	Holding Current (A)	Holding Power (W)	Allowable Voltage Range (V)	
DC with	E1	AC100	50/60	EBB64-D60	0.71	0.36	33.2	90 to 110	
Rectifier	E2	AC200	50/60	EBB64-D120	0.39	0.19	36.4	180 to 220	
DC	D2	DC24	×	EBB64-D17	3.0	1.5	37.4	21.6 to 26.4	

Understanding Model Numbers

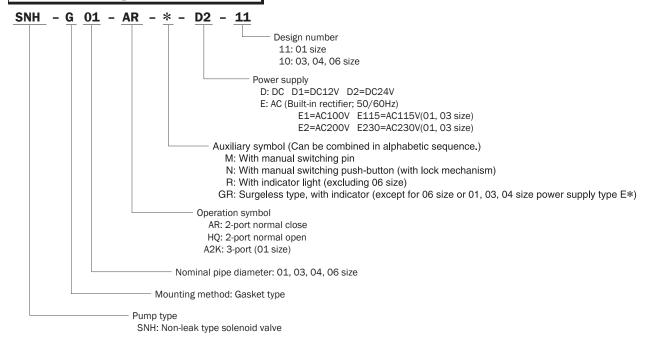


Options

(Auxiliary Symbol)

- Select options in accordance with size, as shown in the table to the right.
- (1) The 06 size has an EC connector and a built in surge killer as standard. However, an indicator light is not provided because of space considerations.
- (2) Option N increases the measurement by the size of the pushbutton only.

Auxiliary symbol Size	M	N	R	GR
01	TM	TM	TM	TM
03	TM	TM	TM	TM
04	TM	TM	TM	TM
06	TM	TM		

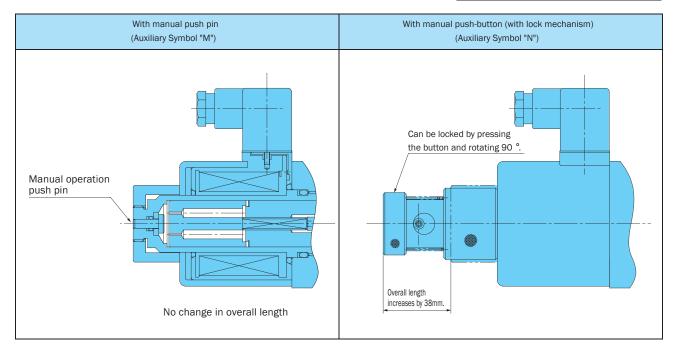

Electrical Circuits


• These electrical circuits are for sizes 01, 03, 04. An EC connector is used for size 06. See the next page for more information


Valve	Connector Type	Wiring	Electrical Circuit Diagram
	EA41-1A (Standard for power supply type D*)	supply to No.1 and N ⊕ termina	the power terminals to 2. The lis ground. erminal as
	EA41-DR1/2-1C (D* option: R)	supply to No.1 and N ⊕ termina	the power terminals to 2. The il is ground. erminal as
G01 G03 G04 Size	EA41-GRD1/2-1C (D* option: GR)	PG11	ф ф ф ф ф ф ф ф ф ф ф ф ф ф ф ф ф ф ф
	EA42-1B (For power supply type E*)	Power supply terminal supply to the boat when grunnection is remove the	ound considered, see board and
	EA42-R1/2-1B (E* option: R)	this case, nect the p	terminal. In do not con- ower supply 1 and No. 2 COM 50/60Hz

- Note: 1.Connector types 1 and 2 indicate voltage. (1: 100V AC or 12V DC; 2: 200V AC or 24V DC) 2.Use a connector cord with a diameter that is in the range of φ8 to φ10.

 - 3. The orientation of the connectors can be changed in 90° increments by modifying the terminal block.
 - 4. The cover cannot be removed unless the installation screws are removed.
 - 5.Use an M3 type as a solderless terminal.
 - 6.Tighten the M3 screws that secure connectors and terminals to a torque of 2.6 to 4.4 in lbs.


 06 Size EC Connector SNH-G06 provides large switching power, so an EC connector is used.
 During switching, this EC connector supplies twice the current (starting current) that normally flows to the coil (holding current), and drops the current back to normal after switching is complete.

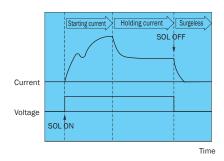


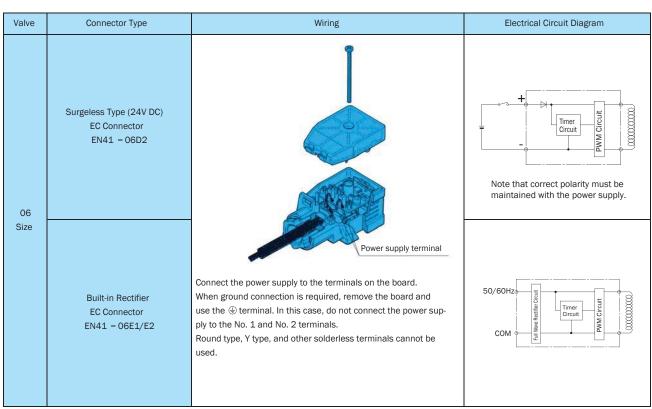


Note: The orientation of the EN41-06** connector cannot be changed at 90° intervals by modifying the terminal block.

Installation Dimension Drawings

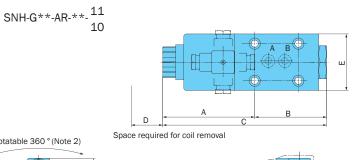

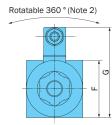

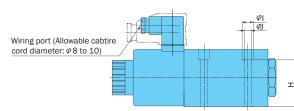



Dimension Table

Size	Α	В	С	D	Е	F	G (Note) 2	Н	I	J
01	100	60.5	160.5	60.5	46	48	91 (94.5)	37.5	9	5.5
03	114	89	203	63	70	72	112 (115.5)	58	14	8.5
04	132	71	203	63	75	71	112 (115.5)	58	14	8.5
06	137	82	219	63	85	71	115.5	60	18	11


Note: 1. The 01, 03, 04 size power supply type E* allows rotation at 90° intervals, but the 06 size cannot be rotated.


- 2. Values in parentheses are for 01, 03, 04 size power supply type E^{\star} .
- 3. The P and T ports of the 01, 03 sizes do not have O-ring grooves, so if the manifold has P and T ports, use end plates to close off the valve P and T ports. Contact your agent for information about end plates.

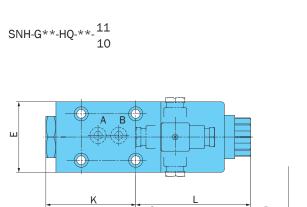

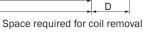



Valve Mounding Surface Dimensions

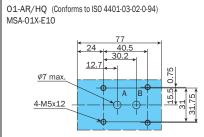

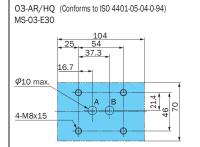

Note: An M6 mounting screw type is not yet available.

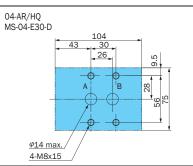


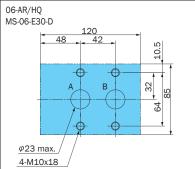

Dimension Table

Rotatable 360 ° (Note 1)

Difference Table							
Size	С	D	E	F	G (Note) 2	K	L
01	160.5	60.5	46	48	91 (94.5)	70.5	90
03	203	63	70	72	112 (115.5)	89	114
04	203	63	75	71	112 (115.5)	83	120
06	219	63	85	71	115.5	100	119

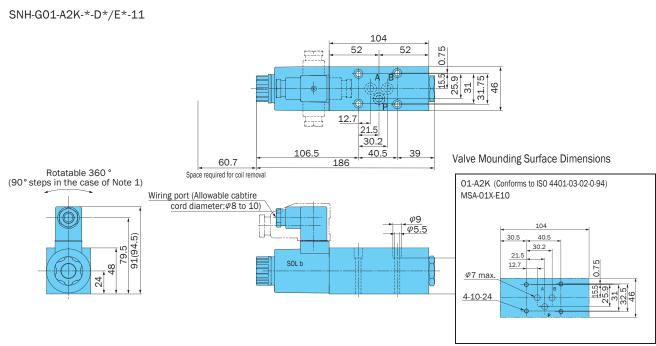

Note: 1. Power supply type E^* allows rotation at 90° intervals.


2. Values in parentheses are for power supply type $\mathsf{E}^\star.$


Performance Curves

Hydraulic Operating Fluid Viscosity 32 centistokes


Pressure Loss Characteristics


Size Flow Path	01	03	04	06
A↔B	а	b	С	d
$P \leftrightarrow A, P \leftrightarrow B$	а			

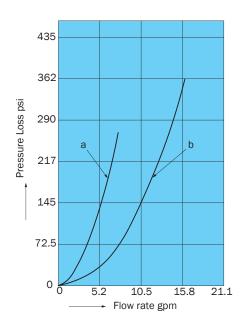


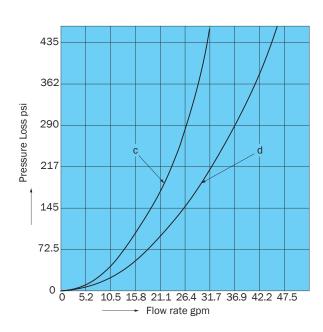


Pressure - Flow Volume Allowable Value

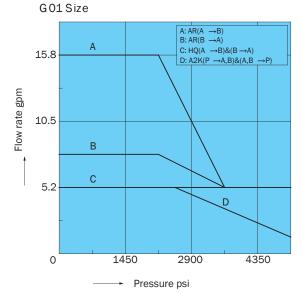


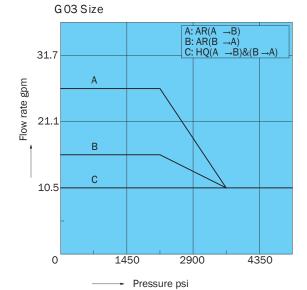

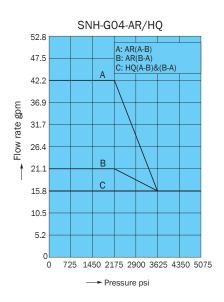


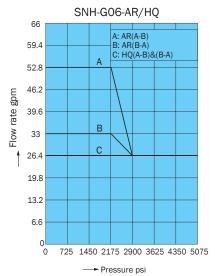

Note: Available flow rate values depend on pressure and fluid flow direction. The following shows how to read the data.

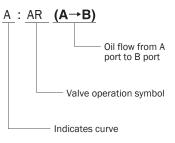

Switching Response Time

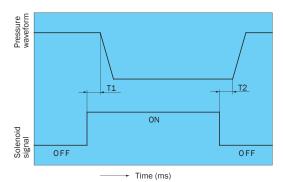


Pressure : 5075 psi Flow Rate : 01 : 5.2 gpm

03 : 10.5 gpm 04 : 15.8 gpm 06 : 26.4 gpm Operating Fluid : ISO VG68

Size	Power	Response 1	Γime (sec)
3126	supply	T1(ON)	T2(OFF)
01	D*	0.03 to 0.05	0.04 to 0.06
01	E*	0.04 to 0.06	0.08 to 0.10
03	D*	0.06 to 0.08	0.04 to 0.06
03	E*	0.07 to 0.09	0.08 to 0.10
04	D*	0.09 to 0.11	0.06 to 0.08
04	E*	0.12 to 0.14	0.14 to 0.16
06	D*	0.04 to 0.06	0.06 to 0.08
06	E*	0.09 to 0.11	0.14 to 0.16


Note: The switching response time changes slightly with operating conditions (pressure, flow rate, viscosity, etc.)

Cross-sectional Drawing

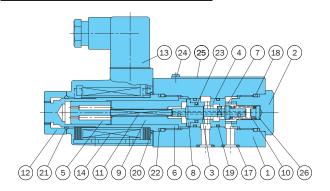

SNH-G01-A2K-**-11


03

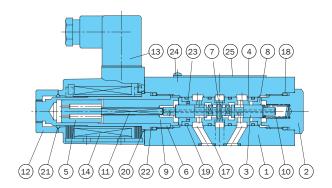


SNH-G04-AR-**10 06
(3) (24) (8) (23) (25) (4) (7) (18) (2)


(12) (21) (16) (15) (5) (14) (11) (20) (22) (9) (6) (19) (17) (3) (1) (10) (26)

SNH-G01-HQ-**-11

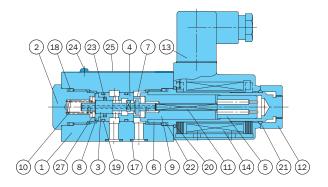

Part No.	Part Name	Part No.	Part Name
1	Body	15	Coil case
2	Plug	16	Coil yoke
3	Poppet	17	O-ring
4	Sleeve	18	O-ring
5	Plunger	19	O-ring
6	Solenoid guide	20	O-ring
7	Ring	21	O-ring
8	Collar	22	Backup ring
9	Solenoid stopper	23	Cap seal
10	Spring	24	Cross recessed head small screw
11	Rod	25	Nameplate
12	Nut	26	Stopper
13	Connector	27	Retainer
14	Solenoid coil		

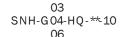

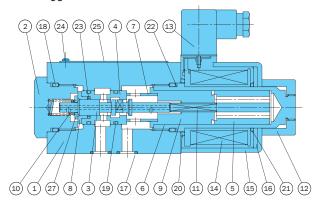

List of Sealing Parts

Part No.	Part Name	01	03	04	06	Q'ty	
						AR, HQ	A2K
17	O-ring	AS568-012 (HS90)	IB-P12	IB-P16	IB-P28	2	3
18	0-ring	IB-P22	IB-P32	IB-P32	IB-P32	2	2
19	O-ring	AS568-017(HS90)	IB-P22	AS568-120 (HS90)	IB-P26	2	4
20	O-ring	S-25	AS568-029	AS568-029	AS568-029	1	1
21	O-ring	1A-P20	AS568-026	AS568-026	AS568-026	1	1
22	Backup ring	T2-P22	T2-P32	T2-P32	T2-P32	2	2
23	Cap seal	*	*	*	*	1	1

Note: O-ring 1B-** refers to JIS B2401-1B. Backup ring T2 indicates JIS B 2407-T2.

Parts marked by an asterisk "" are not available on the market. Contact your agent for more information.